


# FLORIDA BURROWING OWLS FZ-ABS (Flood Zone Artificial Burrow System)

## Nest Box Preparation


NDS 10-inch W. x 11.63 inch H.  
Round Irrigation Valve Box

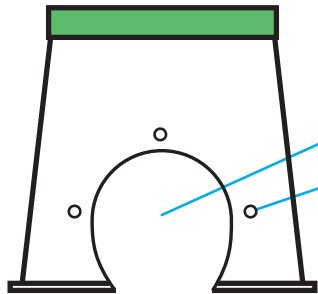

Cut out to  
6.25" Dia.  
~0.25" Dia.


Modify  
Valve Box  
to accept 6" Pipe

Rear  
opening  
allows  
owls to  
extend  
burrow

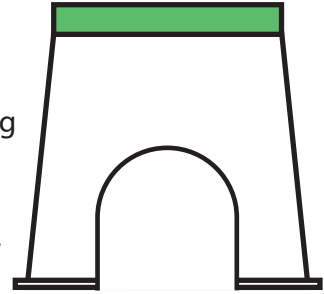


## Pipe Preparation

6-inch Sewer Main PVC Pipe Schedule 40 (preferred)  
Cut to 40-inch Minimum Length

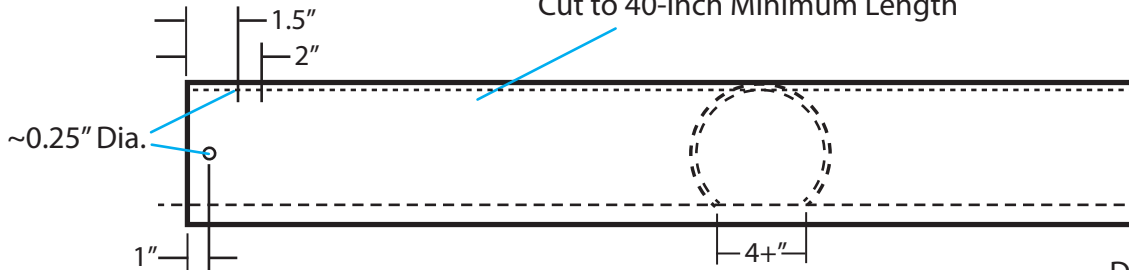

De-burr sawn edges

## Assembly

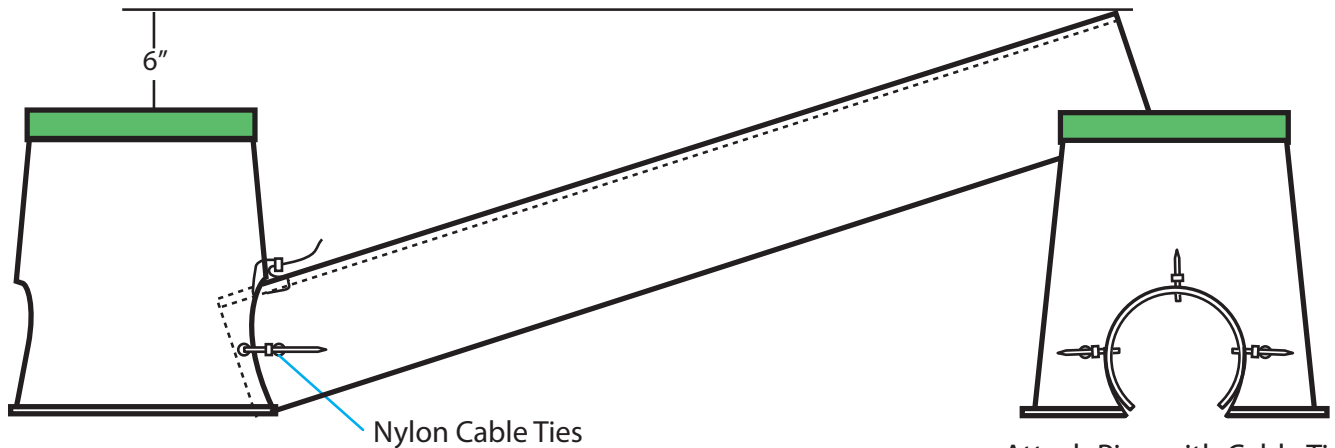

Nylon Cable Ties

Attach Pipe with Cable Ties



Designed by Dr. Brian Mealey & Grant Campbell  
Recommended for Florida Burrowing Owls by Project Perch

Visit: [projectperch.org](https://projectperch.org) for downloadable files

Visit (<https://myfwc.com/license/wildlife/protected-wildlife-permits/burrowing-owl/>) for permit regulations

A publication of Project Perch, Inc.

I. Schuster 33647  
Rev. 2/2022