



FLORIDA BURROWING OWLS FZ-ABS (Flood Zone Artificial Burrow System)

Techniques for Cutting 6" PVC Pipe


Observe safety precautions
when using power tools:
Wear Safety Glasses and
Protective Mask to avoid
ingestion of particles.

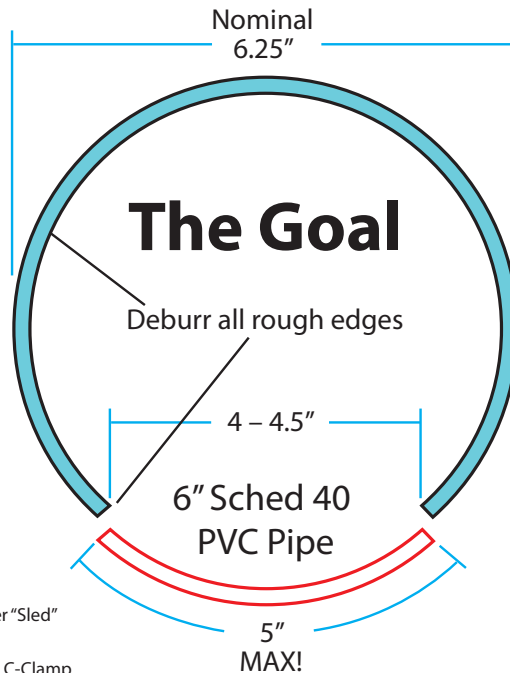

With Table Saw

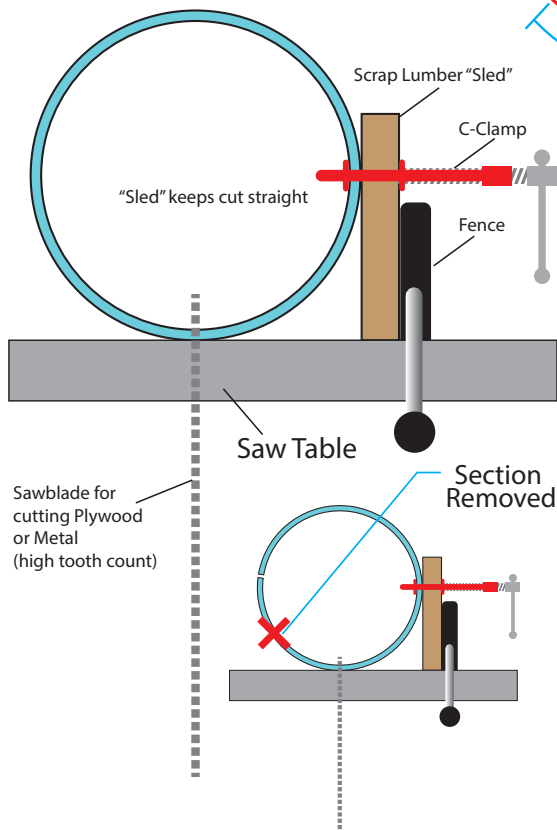

With Saber Saw

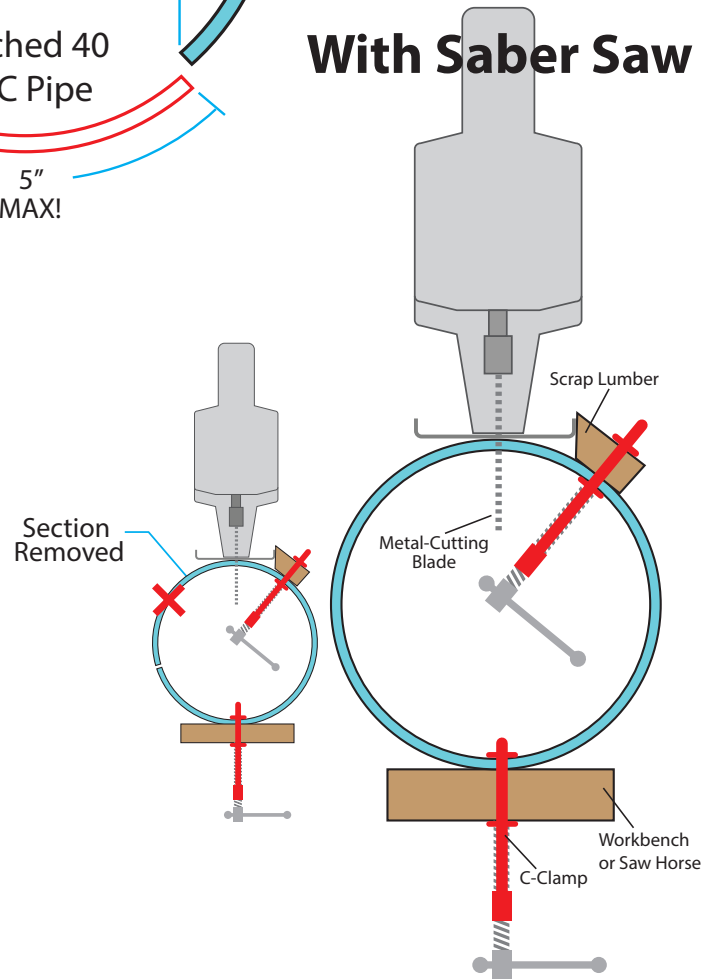

Designed by Dr. Brian Mealey & Grant Campbell
Recommended for Florida Burrowing Owls by Project Perch

Visit: projectperch.org for downloadable files

Visit (<https://myfwc.com/license/wildlife/protected-wildlife-permits/burrowing-owl/>) for permit regulations

A publication of Project Perch, Inc.

I. Schuster 33647
Rev. 2/2022